



# NS.990B

□ 1/2"=12,7mm



- Clé à chocs
- Impact wrench
- Schlagschrauber
- Slagmoersleutel
- Llave de impacto
- Chiave a percussione

Notice d'instructions  
Instruction manual  
Bedienungsanleitung  
Gebruiksaanwijzing  
Guía de instrucciones  
Istruzioni per l'utilizzo  
**NU-NS.990B/98**

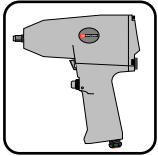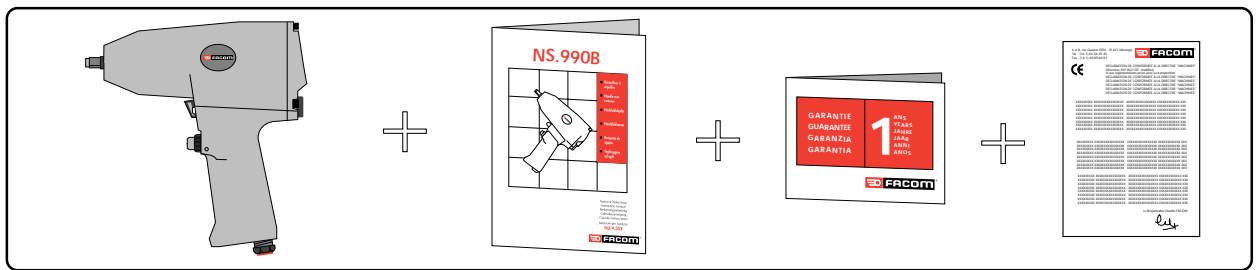

12,7 mm  
1/2"

19,5 mm

6000 t/mn

500 Nm

95 dbA

Ø 7 mm  
mini  
1/4" NPT  
Ø 10 mm



6 bar → 500 l/mn

NS.240  
NS.232A  
NS.230  
NS.210 - 219  
NS.6 - NS.32  
NS.3/8 - 1"1/4  
NS.8L - NS.32L  
NSB.8 - 32  
NSD.13 - 24  
NSH.3 - 19  
NS.236 - NS.237

NSD.1/2 - 3/4

1,53 kg

2,8 m/s<sup>2</sup>

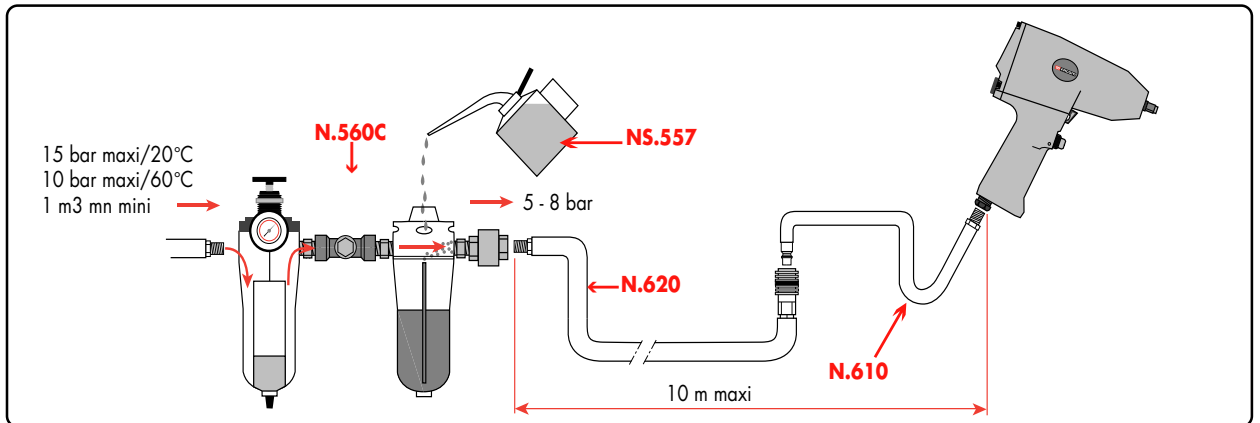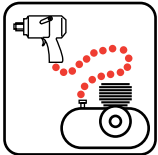

BA;22  
BA.24  
BA.26  
BA.28  
GA.22  
GA.24  
GA.26  
GA.28

50 Nm

500 Nm

mini 500 Nm




Inverseur  
Reverser  
Umschalter  
Omkeerschakelaar  
Engranaje inversor  
Invertitore

Porter des lunettes de sécurité  
Wear eye protectors  
Schutzbrille tragen  
Een veiligheidsbril dragen  
Utilizar gafas de seguridad  
Portare gli occhiali di sicurezza



Pour garder la machine en bon état, remplacer les pièces d'usure toutes les 200 heures d'utilisation.  
To keep the machine in proper working order, change wear parts after 200 hours to use.  
Um die Maschine in gutem Zustand zu erhalten, Gebrauchsteile alle 200 Betriebsstunden austauschen.  
Om deze machine in goede staat te houden, dienen de aan slijtage onderhevige onderdelen na 200 uren gebruik te worden verwisseld.  
Para mantener la maquina en buen estado, cambiar las piezas de desgaste despues de 200 horas de utilizacion.  
Per mantenere la macchina in buono stato, cambiare le parti d'usura dopo 200 ore di funzionamento.

NS.990BRN1

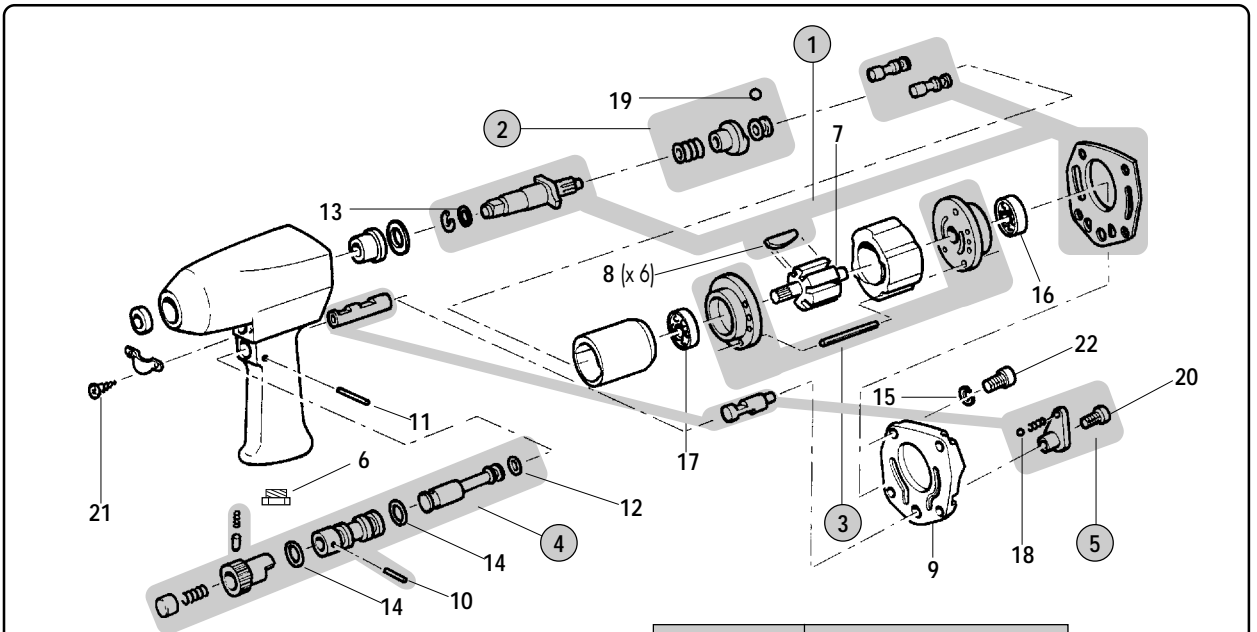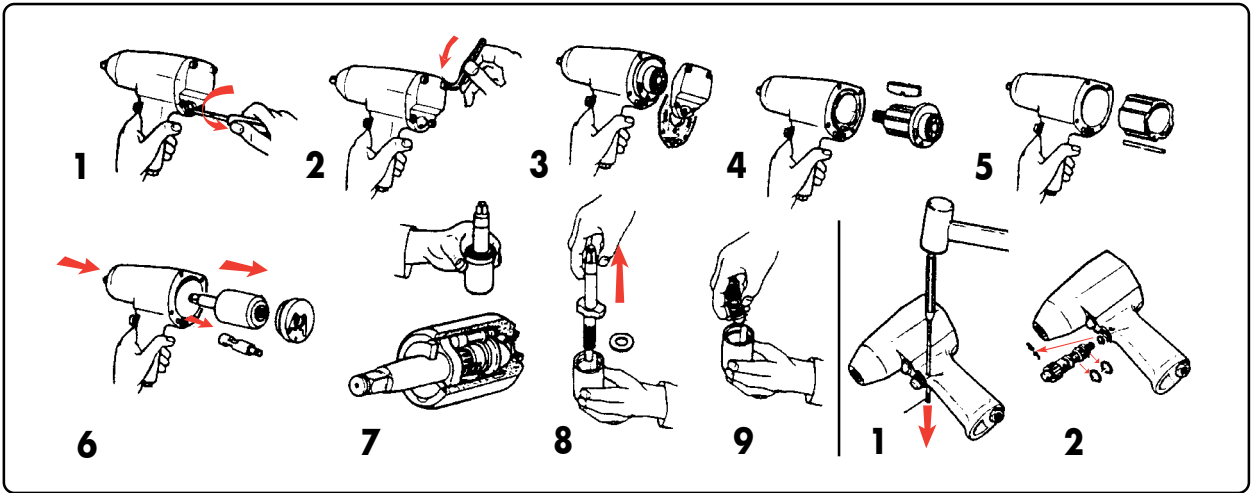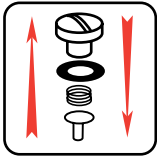

N°	NS.990B
①	NS.990BRN1
②	NS.990BSE1
③	NS.990BSE2
④	NS.990BSE3
⑤	NS.990BSE4
6	NS.990B003
7	NS.990B044
8	NS.990B046J6
9	NS.990B051
10	GOUP.A2,5-16,5
11	GOUP.E,3-22
12	BAGUE.R00380-180
13	BAGUE.R01100-240
14	BAGUE.R01180-240 (2)
15	ROND.WZM5 (4)
16	ROULEMENT.6201
17	ROULEMENT.6202
18	BILLE.RB-3
19	BILLE.RB-8
20	VIS.F90PHI,M3-12
21	VIS.RI,M4-6 (2)
22	VIS.CHC,M5-25 (4)


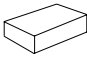
**UNITED  
KINGDOM  
& EIRE**

FACOM Tools LTD  
Bridge Wharf - Bridge Road  
CHERTSEY - SURREY KT16-8LJ  
UNITED KINGDOM  
☎ : (01932) 566 099  
Fax: (01932) 562 653

**BELGIQUE  
BELGIE**

FACOM Belgique S.A./NV  
Weihoek 4  
1930 Zaventem  
BELGIQUE  
☎ : (02) 714 09 00  
Fax: (02) 721 24 11

**DEUTSCHLAND**

FACOM GmbH  
Postfach 13 22 06   
42049 Wuppertal  
Otto-Wells-Straße 9   
42111 Wuppertal  
DEUTSCHLAND  
☎ : (0202) 270 63 0  
Fax: (0202) 270 63 50

**SUISSE  
SCHWEIZ  
AUSTRIA**

FACOM S.A./AG  
12 route Henri-Stéphan  
1762 Givisiez/Fribourg  
SUISSE  
☎ : (4126) 466 42 42  
Fax: (4126) 466 38 54

**NEDERLAND**

FACOM Gereedschappen BV  
Kamerlingh Onnesweg 2  
Postbus 134  
4130 EC Vianen  
NEDERLAND  
☎ : (0347) 372 334  
Fax: (0347) 376 020

**UNITED  
STATES**

FACOM TOOLS Inc.  
3535 West 47th Street  
Chicago Illinois 60632  
U.S.A.  
☎ : (773) 523 1307  
Fax: (773) 523 2103

**ESPAÑA  
PORTUGAL**

FACOM Herramientas SRL  
Poligono industrial de Vallecas  
C/.Luis 1º, s/n-Nave 95 - 2ºPl.  
28031 Madrid  
ESPAÑA  
☎ : (91) 778 21 13  
Fax: (91) 778 27 53

**SINGAPORE  
FAR EAST**

FACOM Tools FAR EAST Pte Ltd  
15 Scotts Road  
Thong Teck Building # 08-01-02  
Singapore 228218  
SINGAPORE  
☎ : (65) 732 0552  
Fax: (65) 732 5609

**ITALIA**

U.A. FACOM Italia  
Via Ronchetti 3  
21041 Albizzate (VA)  
ITALIA  
☎ : (0331) 985 811  
Fax: (0331) 985 930

**FRANCE**

Société FACOM  
6-8, rue Gustave Eiffel  
B.P.99  
91423 Morangis cedex  
FRANCE  
☎ : 01 64 54 45 45  
Fax: 01 69 09 60 93  
<http://www.facom.fr>

